



Quick Installation Guide
P2600KA-EN
REV B | 2023-09

CellClutch™

CLBA & CLBP

Data Transmission



For additional product information visit our website at www.ClecoTools.com

Disclaimer

Apex Tool Group reserves the right to modify, supplement, or improve this document or the product without prior notice.

Trademark

Cleco is a registered trademark of Apex Brands, Inc.

Apex Tool Group

670 Industrial Drive
Lexington, SC 29072
USA

Manufacturer

Apex Tool Group GmbH

Industriestraße 1
73463 Westhausen
Germany

Content

1	About this Document	4
1.1	Other Documents.....	4
1.2	Symbols in the Text	4
2	System Layout.....	5
2.1	WLAN communication	5
2.1.1	Tool Data	5
2.1.2	Country-specific channel settings	6
2.1.3	Cell planning for access point.....	7
3	Before Initial Operation.....	9
3.1	Requirements	9
3.2	Install Software	9
4	Initial operation.....	10
4.1	Configuring the access point	10
4.1.1	mPro200GC-AP	10
4.1.2	mPro400GCD	11
4.2	Configuring RF settings	12
4.3	Installing the Tool.....	14

About this Document

This document is intended for qualified employees responsible for installation and maintenance (administrators, installers, maintenance technician, service, operator).

It contains information

- for safe, appropriate installation and handling. This document is not sufficient for planning complex network infrastructures.
- about system structure.

The original language of this document is German.

1.1

Other Documents

Number	Document
P2260JH	Installation Manual – WLAN Data Transmission
P2280PM	Programming Manual – S168813 mPro400GC(D) & mPro200GC(-AP)
P2547BA	Instruction Manual – CLBA & CLBP Cordless EC Tool
P2570PM	Programming Manual – S168715 CLBA & CLBP & CLBS
	S168691 mProRemote Professional

1.2

Symbols in the Text

<i>italic</i>	Menu options (e.g., Diagnostics) input fields, check boxes, radio buttons or dropdown menus.
>	Indicates selection of a menu option from a menu, e.g., <i>File > Print</i> .
<...>	Specifies switches, pushbuttons or the keys of an external keyboard, e.g., <F5>.
<i>Courier</i>	Indicates Filenames and paths, e.g., <i>setup.exe</i> .
•	Indicates lists, level 1.
–	Indicates lists, level 2.
a)	Indicates options.
b)	
➤	Indicates results.
1. (...)	Indicates action steps.
2. (...)	
▶	Indicates single action steps.

2 System Layout

The communication between the controller and the tool is possible via WLAN or Bluetooth. The tool can communicate with a mPro200GC-AP or mPro400GCD controller.

The model name of WLAN or Bluetooth enabled tools has a "W" in the 5th position of the name and ends with a country abbreviation.

2.1 WLAN communication

The system layout described is based on communication via WLAN. The access point is integrated in the mPro200GC-AP controller. The tools can communicate according to the following standard:

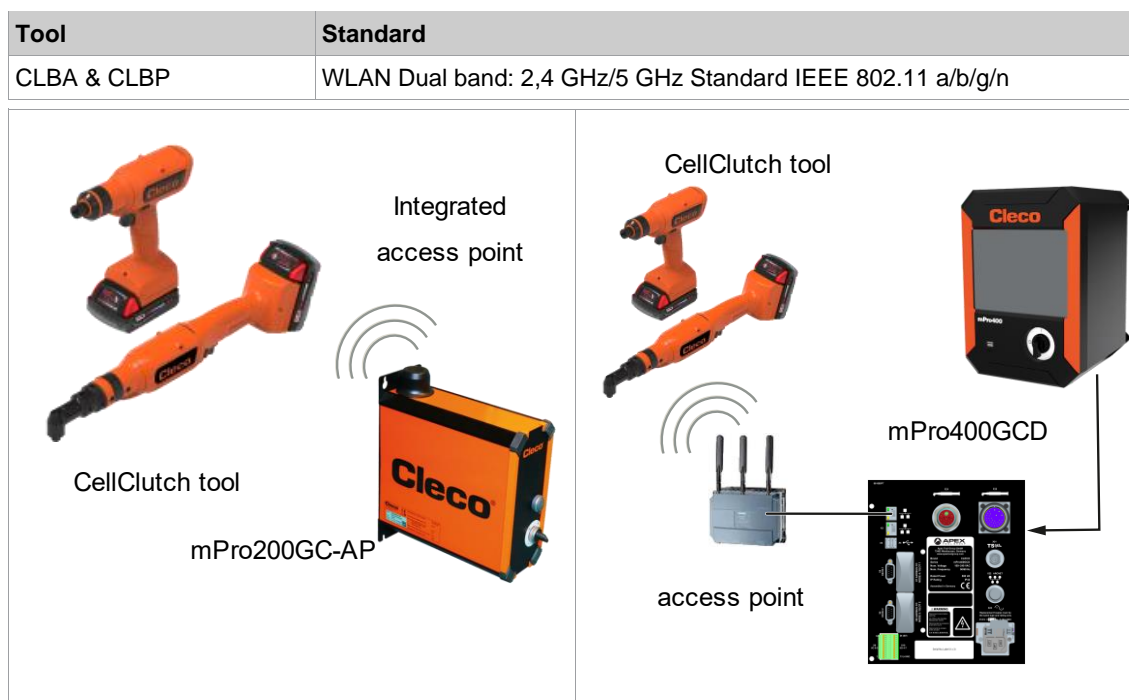


Fig. 2-1: System layout with mPro200GC-AP

Fig. 2-2: System layout with mPro400GCD

2.1.1 Tool Data

Feature	Data	
Standard	IEEE 802.11a/b/g/n	
Security	WEP-64 HEX WEP-64 ASCII WEP-128 HEX WEP-128 ASCII WPA/WPA2-PSK TKIP WPA/WPA2-PSK AES	EAP-PEAP TKIP EAP-PEAP AES EAP-TLS TKIP EAP-TLS AES Ciso LEAP TKIP Ciso LEAP AES
Range	Typically, up to 50 m	
Channels	1 – 13 (2.400 – 2.500 GHz) 36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165 (5,180 – 5,825 GHz)	
Transmission power	≤ 20 dBm	
Sensitivity	-95 dBm (typ. @ 1 Mbps, 2.4 GHz) -86 dBm (typ. @ 1 Mbps, 2.4 GHz) -90 dBm (typ. @ 6 Mbps, 2.4 GHz) -90 dBm (typ. @ 6 Mbps, 5 GHz) -72 dBm (typ. @ 48 Mbps, 5 GHz)	
Modulation	CCK/DSSS/OFDM	

2.1.2 Country-specific channel settings

The tools work in the license-free 2.4 GHz/5 GHz ISM band.

Band	Channel	Frequency in GHz	World	Europe	USA/ Canada	China
			World	EU	FCC	CN
2.4 GHz IEEE802.11b/g	1	2.412	x	x	x	x
	2	2.417	x	x	x	x
	3	2.422	x	x	x	x
	4	2.427	x	x	x	x
	5	2.432	x	x	x	x
	6	2.437	x	x	x	x
	7	2.442	x	x	x	x
	8	2.447	x	x	x	x
	9	2.452	x	x	x	x
	10	2.457	x	x	x	x
	11	2.462	x	x	x	x
	12	2.467	—	x	—	—
	13	2.472	—	x	—	—
5 GHz IEEE802.11a U-NII-1	36	5.180	x	x	x	x
	40	5.200	x	x	x	x
	44	5.220	x	x	x	x
	48	5.240	x	x	x	x
5 GHz IEEE802.11a U-NII-2	52	5.260	—	x	x	x
	56	5.280	—	x	x	x
	60	5.300	—	x	x	x
	64	5.320	—	x	x	x
5 GHz IEEE802.11a U-NII-2 ext	100	5.500	—	x	x	x
	104	5.520	—	x	x	x
	108	5.540	—	x	x	x
	112	5.560	—	x	x	x
	116	5.580	—	x	x	x
	120	5.600	—	x	—	—
	124	5.620	—	x	—	—
	128	5.640	—	x	—	—
	132	5.660	—	x	x	x
	136	5.680	—	x	x	x
	140	5.700	—	x	x	x

Band	Channel	Frequency in GHz	World	Europe	USA/Canada	China
			World	EU	FCC	CN
5 GHz U-NII-3	149	5.745	—	o	x	—
	153	5.765	—	o	x	—
	157	5.785	—	o	x	—
	161	5.805	—	o	x	—
	165	5.825	—	o	x	—

Legend

x: Approved and available
 -: Not permissible, blocking necessary
 o: Permissible with limited power

2.1.3 Cell planning for access point

Each channel operates with a frequency range of 22 MHz. To avoid overlapping the frequency ranges, the channels must be chosen so that they do not overlap. In other words, a maximum of 3 independent channels (e.g., 1, 6 and 11) are available in the 5 GHz frequency band.

The 5 GHz frequency band provides up to 21 independent channels.

To minimize interference between different radio cells that share the same RF channel, it is advisable to physically separate them. Note that for multistory buildings, it is necessary to consider both higher and lower floors.

The following overview shows the basic channel assignment.

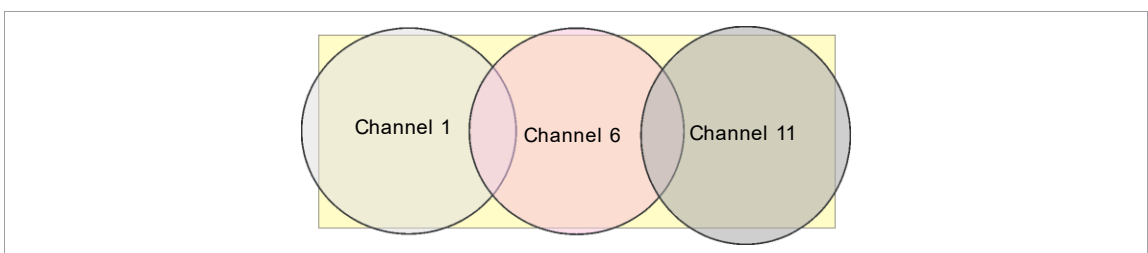


Fig. 2-3: Idealized radio cells, the rectangle symbolize the application areas of the tools

The physical circumference of a radio cell depends primarily on the access point used, the antennas and the type of construction in the surrounding area. The limit of a radio cell is reached when the signal-to-noise ratio (SNR) falls below 15 dB. If the ratio falls below this value, a new radio cell should be started. The typical circumference of a radio cell in a building is up to 50 m.

For the tool to be able to connect to different access points automatically (roaming), the SSID and encryption must be set identically at the corresponding access points.



If wide-area coverage with controlled emission from multiple access points is required, corresponding planning and evaluation must be carried out for the specific case.

Example installation 5 GHz

- Several overlapping radio cells are possible, even if only one free channel is used.
- Up to 200 tools are then possible within the radio range with a limited volume of data.
- The range of the radio cells is limited by the minimal transmission power.

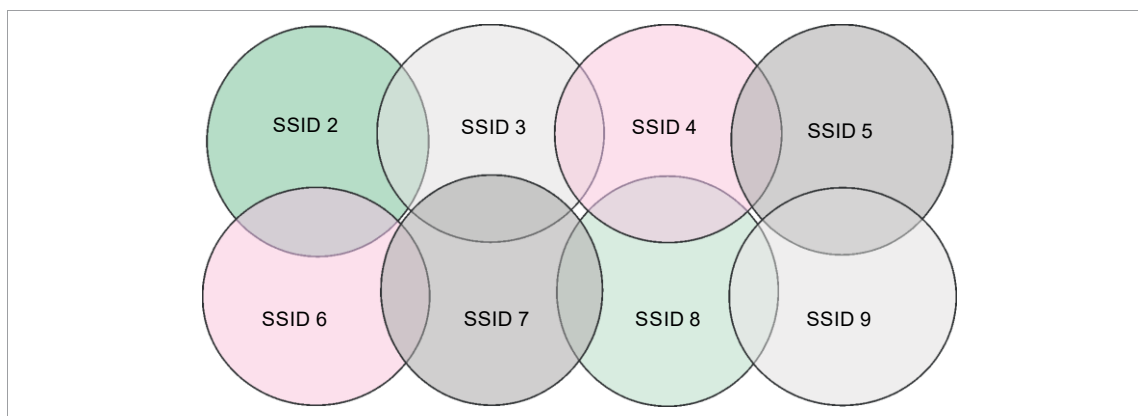


Fig. 2-4: Idealized radio cells = Range of use of the tools, channel 60

3 Before Initial Operation

3.1 Requirements

- Laptop/PC with:
 - Operating system: Windows 10, 64 Bit
 - Screen resolution: 1280 x 768 or higher
- *CLPC100* PC software
- Software *S168691 mProRemote Professional*
- Micro-B USB cable

3.2 Install Software

Installing the software

1. Download the *Installer X.Y.Z* software package from the following website:
<https://software.apextoolgroup.com/current-software-packages/cellclutch/>
2. Start the *CellClutch-X.Y.Z.exe* installation file and follow the installation instructions.
3. Set network settings from laptop/PC to i. e. 192.168.100.201 (if mPro200GC-AP is used).



Windows does not recognize the manufacturer of the software, so a Windows virus message appears. To start the installation, press *More information* and *Run anyway*.

4 Initial operation

The CellClutch tool and the tightening sequence are configured with the CLPC100 software.

4.1 Configuring the access point

4.1.1 mPro200GC-AP

In the factory setting, the IP address and the subnet mask of the controller are specified with a default value (Ethernet 1):

Parameter	Default value
IP address	192.168.100.200
Subnet mask	255.255.255.0



Note

IP address conflict

The 200 Series controllers have a factory default IP address of 192.168.100.200. If multiple controllers are connected to the same network without changing the original IP address, an IP conflict occurs.

- Assign a new, unique IP address to each controller.

Configuring the access point

1. Connect laptop/PC directly to the controller via an Ethernet cable.
2. Start *mProRemote Professional* on the Laptop/PC.
3. Enter the IP address 192.168.100.200 in the *Remote Control* tab in the *Target* input field.
4. Press *Remote (TCP/IP)*.
 - A connection to the controller is established.
 - The user interface of the controller opens on the laptop/PC.
5. Select *Navigator > Utility > System Settings > Cordless Tools*.
6. Open the *WLAN AP Configuration*.
7. Carry out the desired settings for the configuration of the access point.
8. Press <Apply> to save the changes.

This tab is only displayed for the series mPro200GC(-AP) controller.

Communication with tool | Tool identification | **WLAN AP Configuration** | Bluetooth AP Configuration

☒ Activate WLAN Communication

SSID: ☒ Set default SSID

Password: ☒ Default password

Channel selection:

2.4 GHz channels (802.11 b/g/n)

☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6

☐ 7 ☐ 8 ☐ 9 ☐ 10 ☐ 11

5.2 GHz channels (802.11 a)

U-NII-1

☐ 36 ☐ 40 ☐ 44 ☐ 48

Information to setup clients for access point:

Static IP address range for tools: 192.168.245.1 to 192.168.245.100

Subnet mask: 255.255.255.0

Gateway: 192.168.245.250

Wifi-Encryption: WPA/WPA2-PSK AES

Fig. 4-1: WLAN AP Configuration tab

Parameter	Description
Activate WLAN Communication	If the checkbox is activated, WLAN is enabled on the controller. ➤ The bluetooth function is deactivated.
SSID	Enter the SSID for the WLAN name (access point) to which a connection is to be established.
Set default SSID	If the <i>Set default SSID</i> checkbox is activated, then a default value for the SSID is assigned.
Password	Enter the password for the access point. The default password is visible. As soon as a new password is assigned, asterisks * are displayed instead of numbers.
<Generate Password>	Press <Generate Password> to generate any eight-digit password.
Default Password	If the <i>Default Password</i> checkbox is activated, then the default password is displayed.
Channel bands	Select the frequency band. Only one channel can be selected. The following may be selected: <ul style="list-style-type: none"> • 2.4 GHz • 5.2 GHz
2.4 GHz channels (802.11 b/g/n)	Select channel. Only one channel can be selected. Only active if the 2.4 GHz frequency band has been selected.
5.2 GHz channels (802.11 a)	Select channel. Only one channel can be selected. Only active if the 5.2 GHz frequency band has been selected.
Information to setup clients for access point	Access point information: <ul style="list-style-type: none"> • Range of IP addresses for tools • Subnet mask • Gateway • WLAN encryption
<Identify>	Update the view of the WLAN settings.
<Apply>	Save the settings.
<OK>	Exit software, the settings are saved.
<Cancel>	Exit software, the settings are not saved.

For all other settings, default values are assigned, which cannot be changed.



If the PC cannot establish a connection to the controller, then the settings can be made via a monitor connected to the controller.

Make settings via monitor

1. Connect a monitor via a VGA connection, as well as a keyboard and a mouse, to the controller.
➤ The software user interface for the controller appears on the screen.
2. *Navigator> Utility > System Settings > Cordless Tools* wählen.
3. Open the *WLAN AP Configuration*.
4. Carry out the desired settings for the configuration of the access point.
5. Press <Apply> to save the changes.

4.1.2

mPro400GCD

To configure an access point to work with a mPro400GCD, see document *P2260JH*.

Configuring RF settings

The tool RF settings can be configured with a laptop/PC. Perform the following steps only when WLAN communication is to be established.

Connect the tool to the laptop/PC via USB

1. Connect the tool to the laptop/PC via a Micro-B USB cable.



Fig. 4-2: Remove battery



Fig. 4-3: Connect Micro-B USB cable

2. Determine the serial port (COM port) of the tool in the device manager of the laptop/PC.

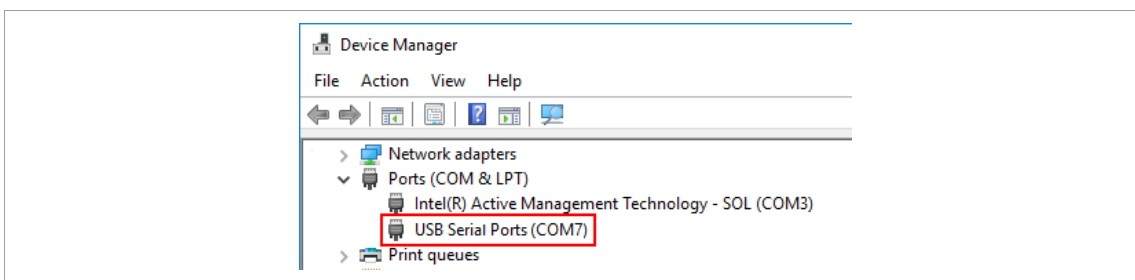


Fig. 4-4: Device Manager

3. Start the *CLPC100* PC software.

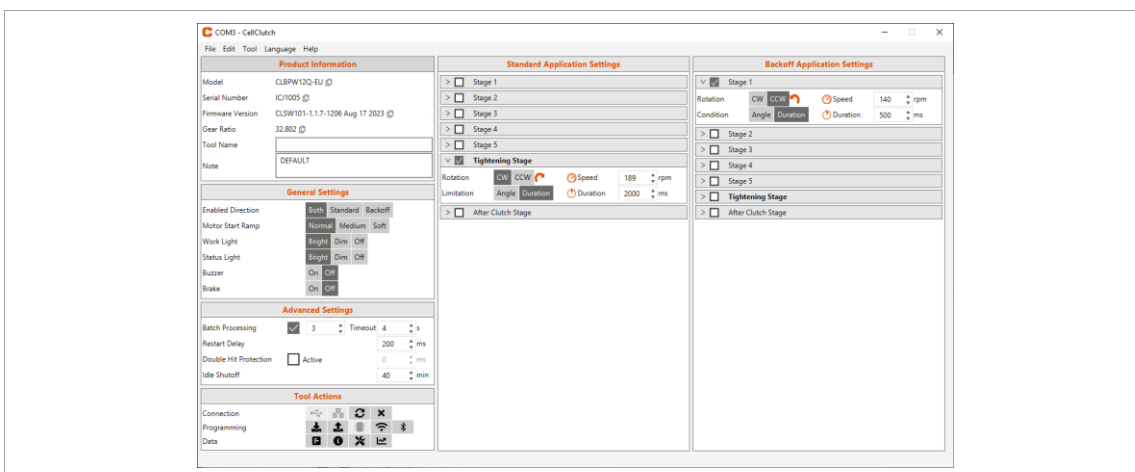



Fig. 4-5: PC software

4. Select under *Tool Actions*  the COM port in the drop-down menu. For details see P2570PM.
5. Confirm the input with <OK>.

The WLAN settings on the tool are configured via the CLPC100 PC software. This function is only possible with WLAN compatible CellClutch tools. The Model name of WLAN-capable tools has a "W" in the 5th position of the name and ends with a country abbreviation.


Example:

Tool model without WLAN	Tool model with WLAN
CLBP04Q	CLBPW04Q-EU

Following endings exist:

- EU: Europe
- NA: North America
- CN: China
- 00: Rest of the world

Configure WLAN settings and write them to the tool

1. Connect the tool to the Laptop/PC via a Micro-B USB cable.
 - The connected tool is displayed in the header and in the *Product Information* area.
2. To open the WLAN Settings, press . This function is only active when a WLAN capable tool is connected.

If WLAN settings are already stored on the tool, the data (except Network Key and Password) is automatically loaded and displayed when the dialog is opened.
3. Make the following settings:



Fig. 4-6: WLAN settings

Parameter	Description
MAC Address	Display of the MAC address.
SSID	Enter SSID. SSID must be identical to the access point.
Hostname	Optionally, a hostname can be entered. If the hostname is empty <i>Livewire</i> is displayed.
DHCP	The IP address is automatically assigned. If a mPro200GC(-AP) is used, do not select this option.
IPv4 Address	Enter the IP address. In the last block, numbers between 1 and 49 can be assigned as a static address.
IPv4 Mask	Enter the subnet mask.
IPv4 Gateway	IP address that is assigned by the access point.
Transport	Select a protocol. If a mPro200GC(-AP) is used, select TCP.
IP Conflict Detection	If the check box is selected, duplicate IP addresses are detected.

Parameter	Description
Security	Select security. <i>Security</i> must be identical to the access point.
Network Key	Enter the network key. The network key must be identical to the access point.
User	Enter a username.
Password	Enter a password.
Regulatory Domain	Specifies country-specific channel settings. This setting is stored in the tool.
WLAN Standard	Select the WLAN mode: <ul style="list-style-type: none"> Select 802.11a/b/g/n if a frequency band of 2.4 GHz or 5 GHz is used. Select 802.11a if a frequency band of 5 GHz is used. Select 802.11b/g/n if a frequency band of 2.4 GHz is used. Select SRD if UNII-3 channels are used.
Channel Mode	There are two setting options: <ul style="list-style-type: none"> <i>Auto</i> The corresponding channel is automatically searched for. The channels are unlocked and can be selected manually.
Frequency Band	Select a frequency band.
2.4 GHz Channels	Select channels. These options depend on the <i>Regulatory Domain</i> , <i>WLAN Standard</i> and <i>Channel Mode</i> .
UNII-1 Channels	
UNII-2 Channels	
UNII-2 Ext Channels	
UNII-3 Channels	
Transmission power	Set transmission power.
Roaming Aggressiveness	Setting option, from which signal strength the tool connects with another access point.
Certificate	Select a *.p12 certificate file. This is required for EAP-TLS encryption. As soon as the settings are written to the tool, the certificate file on the tool is replaced. If no certificate file is selected, the existing file on the tool remains.
Certificate Password	If the certificate file is protected, enter the password.

4. Click <Write>.
 - The WLAN settings are written to the tool. As soon as the data is transmitted, a Windows message is displayed on the laptop/PC.

4.3 Installing the Tool

Up to ten tools can be connected to one controller via WLAN.

Up to seven tools can be connected to one controller via Bluetooth.

1. Select *Navigator> Tool Setup* on the user interface of the controller.
2. Press <Install> to add a tool to the tool list.
3. Carry out the following settings:

Parameter	Description
Group Name	► Select Tool Group.
Name	► Select Tool Group.
Type	► Select <i>Cordless Tools</i> . ► Select <i>CellClutch</i> .
IP address / hostname	► Enter the IP address that has been assigned to the tool using the <i>LiveWire Utilities</i> software.

4. Press <OK> and save the settings.
 - The Tool List is displayed.
 - Status of tool is now *Needs User Acceptance*..

5. Select <Tool Settings>.
6. Check the *Model Number* and *Serial Number* and confirm that the tool displayed corresponds to the tool connected.
7. Save the settings with <Accept>.
 - The Tool List is displayed. Status of tool is now *Online*.
8. To save the settings, select <Navigator>.
9. For additional programming for tightening (e.g., PG), see document *P2280PM*.

POWER TOOLS SALES & SERVICE CENTERS

Please note that all locations may not service all products.

Contact the nearest Cleco® Sales & Service Center for the appropriate facility to handle your service requirements.



Sales Center



Service Center

NORTH AMERICA | SOUTH AMERICA

DETROIT, MICHIGAN

Apex Tool Group
2630 Superior Court
Auburn Hills, MI 48236
Phone: +1 (248) 393-5644
Fax: +1 (248) 391-6295

LEXINGTON,

SOUTH CAROLINA

Apex Tool Group
670 Industrial Drive
Lexington, SC 29072
Phone: +1 (800) 845-5629
Phone: +1 (919) 387-0099
Fax: +1 (803) 358-7681

MEXICO

Apex Tool Group
Vialidad El Pueblito #103
Parque Industrial Querétaro
Querétaro, QRO 76220
Mexico
Phone: +52 (442) 211 3800
Fax: +52 (800) 685 5560

EUROPE | MIDDLE EAST | AFRICA

FRANCE

Apex Tool Group SAS
25 Avenue Maurice Chevalier - ZI
77330 Ozoir-La-Ferrière
France
Phone: +33 1 64 43 22 00
Fax: +33 1 64 43 17 17

GERMANY

Apex Tool Group GmbH
Industriestraße 1
73463 Westhausen
Germany
Phone: +49 (0) 73 63 81 0
Fax: +49 (0) 73 63 81 222

HUNGARY

Apex Tool Group
Hungária Kft.
Platánfa u. 2
9027 Győr Hungary
Phone: +36 96 66 1383
Fax: +36 96 66 1135

ASIA PACIFIC

AUSTRALIA

Apex Tool Group
519 Nurigong Street, Albury
NSW 2640
Australia
Phone: +61 2 6058 0300

CHINA

Apex Power Tool Trading
(Shanghai) Co., Ltd.
2nd Floor, Area C
177 Bi Bo Road
Pu Dong New Area, Shanghai
China 201203 P.R.C.
Phone: +86 21 60880320
Fax: +86 21 60880298

INDIA

Apex Power Tool Trading
Private Limited
Gala No. 1, Plot No. 5
S. No. 234, 235 & 245
Indialand Global
Industrial Park
Taluka-Mulsi, Phase I
Hinjawadi, Pune 411057
Maharashtra, India
Phone: +91 020 66761111

JAPAN

Apex Tool Group Japan
Korin-Kaikan 5F,
3-6-23 Shibakoen, Minato-Ku,
Tokyo 105-0011, JAPAN
Phone: +81-3-6450-1840
Fax: +81-3-6450-1841

KOREA

Apex Tool Group Korea
#1503, Hibrand Living Bldg.,
215 Yangjae-dong,
Seocho-gu, Seoul 137-924,
Korea
Phone: +82-2-2155-0250
Fax: +82-2-2155-0252

Cleco

Apex Tool Group, LLC

Phone: +1 (800) 845-5629

Phone: +1 (919) 387-0099

Fax: +1 (803) 358-7681

www.ClecoTools.com

www.ClecoTools.de